

## Worktop Actuator Fitting Instructions

1. Remove push on/off Tweeny bezel from top of actuator (this is a push interference fit). The plunger will also come out. Hold thread of Actuator and turn base clockwise to separate these two parts.
2. Place Bezel onto work top in the desired position (flat side down with the small hole nearest to you). Mark both holes on worktop.
3. Use a 5mm pilot drill for both holes.
4. Use an 18mm drill for the centre hole (Large hole in Bezel) and a 9mm drill for the light guide (Small hole in Bezel).
5. Remove nut from thread and insert threaded neck into 18mm hole from the top, replace the 24mm nut and tighten gently
6. Replace base locating in slot and turn anti-clockwise. Replace plunger. Push The light guide through the small hole from underneath the worktop and push into the hole in the bezel. Push Bezel down into position on worktop. Attach air pipe to black spigot on base of Actuator.
7. Finally attach air pipe and light guide to your Mayfair disposer.

